

# SPORT-S8


## Radio Remote Controls



**SPEED-O-CONTROLS**  
**PVT. LTD.**   
**RADIO REMOTE CONTROLS**

### Receiver

**WARNING!** The receiver must NOT be opened by any other than a qualified installer.  
Make sure to turn the electricity off before opening the receiver.

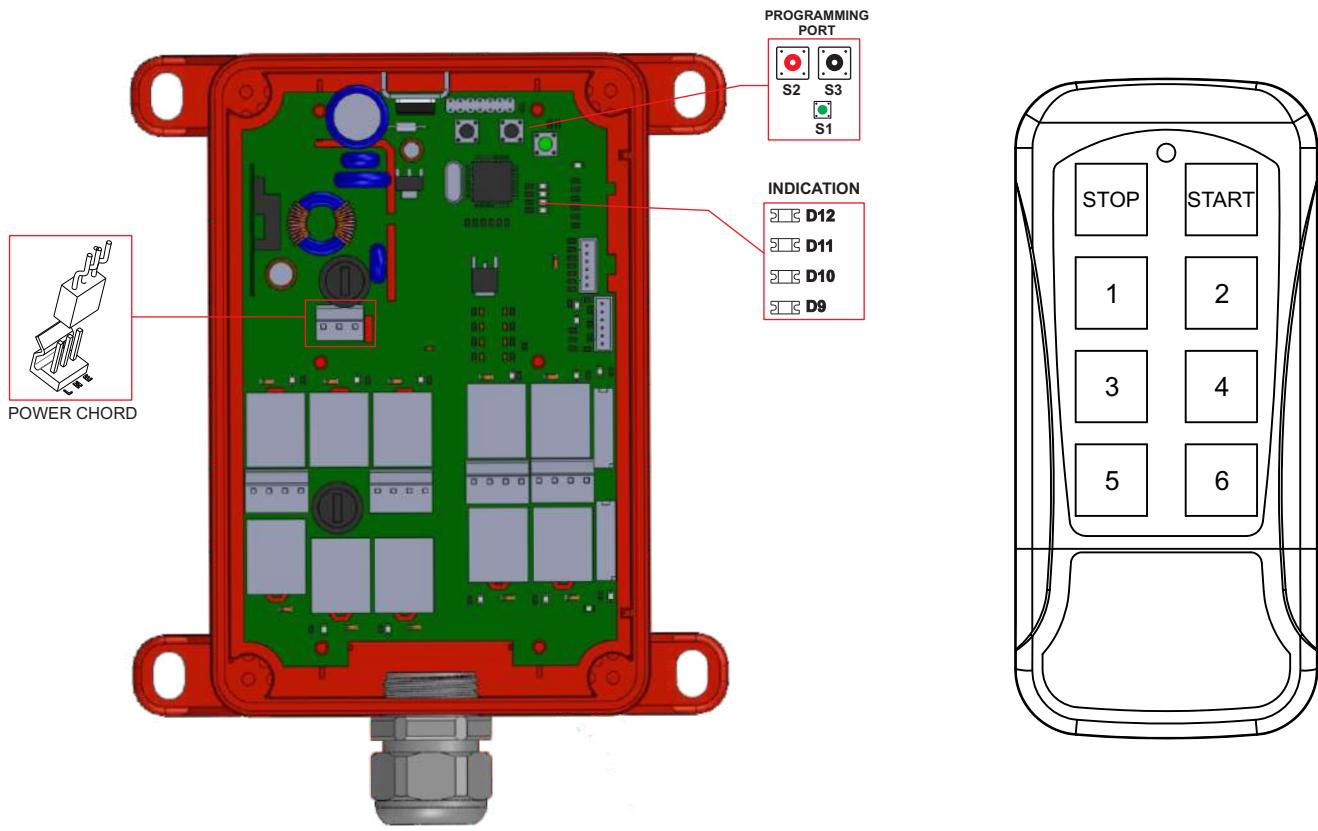

### TRANSMITTER


### Technical Data

	RECEIVER	TRANSMITTER
RF Sensitivity	-117dBm at 0.6kBaud	-
RF Power Output	10 mW	-
Number of Relays	6 + 2 (Start/Alarm)	-
Relays	Resistive load: 5A at 250VAC	-
Power Requirements	48VAC / 230 VAC	-
Fastening	By means of Nuts & Bolts	-
Current Consumption	-	18 mA (Instantaneous)
Standby Consumption	-	1 mA
Battery Capacity & Type	-	2 nos, AA size Alkaline, 3.0V
Dimensions (mm)	165 (H) x 150 (B) x 72(W)	55 (W) X 120 (B) x 26(H)
Weight	Approx 0.5 Kg	200 gms (without battery)
Modulation	Frequency Modulation	
Operating Freq.	433-434 MHz	
Channel Spacing	25 KHz	
Operating Temp.	-20 C to +70 C	
Operating Range	100 meters	
Protection Rating	IP 65	

### Pairing RX TO TX

STEP	ACTION	INDICATION	
STEP 1: Transmitter into pairing mode	• Remove battery  Press  +  Push Buttons on transmitter simultaneously & insert battery 	• The transmitter Red and Green LED shall blink alternately 3 Times   • Tx LED - Red Led will glow  	
STEP 2: Receiver into pairing mode.	• Switch off receiver Power / Press Reset (remove power chord).  OR • Keep  pressed & switch on receiver power / release reset	• D 9  Red LED glows constantly. • D 10  Green LED starts blinking fast. • Wait until D 10  glows constantly.	
Step 3: Transmitter Confirmation	• When D 10  glows constantly, press  button in transmitter & release the switch  in receiver.	• Tx LED shall blink Green. • Rx LED D9  shall stop blinking. • Rx LED D10  Button. • Press Receiver   Button for confirmation.	• Tx LED shall blink Red Twice and Green once in Loop. • Pairing is complete.
Step 5: Reset the system.	• Remove Transmitter Battery 	• Tx battery sequence should start. • Rx D10  <p>Please contact our service Department on - 02242469730/31 for any assistance for trouble shooting/Installation guidance.</p>	

The SPORT series transmitter has 8 pushbuttons.

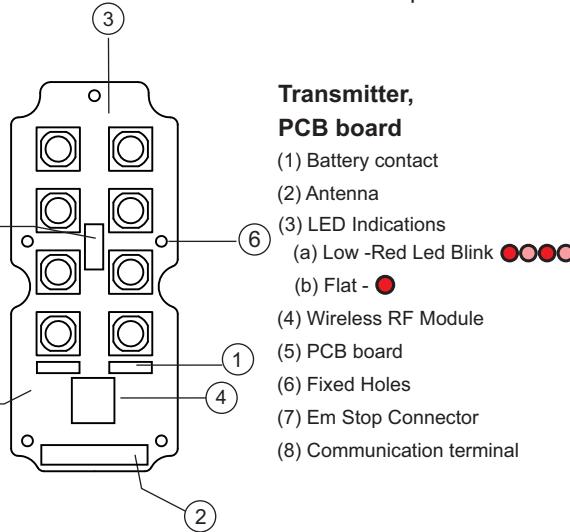

#### START / Horn switch

The SPORT-S8 series transmitter has an Start / Horn switch on the top-right.

The Start / Horn switch has 2 mode:


1. Press to start
2. Press for horn while operating

Start the transmitter in operating mode

Press "START" button.

#### To Display the Radio Power

1. Press button 2 & button 6 and insert the battery. On this RED led blink 5 times
2. To display Radio Power press button 2.
3. This will display the value of the Radio Power by blinking led. (e.g. if Radio Power is set to the value 21, then the GREEN led blink 2 times & RED led blink once)

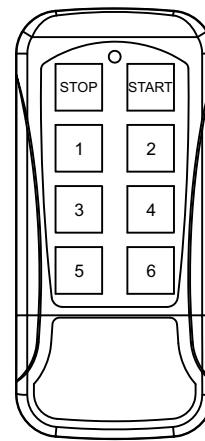


#### Transmitter, Front view

- (01) Button-01(Start/Horn)
- (02) Button-02(Stop)
- (03) Button-03
- (04) Button-04
- (05) Button-05
- (06) Button-06
- (07) Button-07
- (08) Button-08

#### Changing the batteries

Use Duracell Alkaline 'AA' batteries (1.5v x 2)

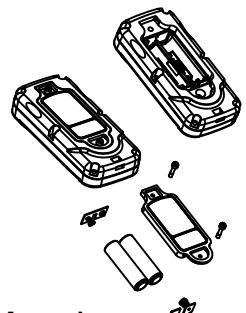

#### Change the batteries

Battery Type Alkaline 'AA' (1.5v x 2)

#### Range Limiting

The Range limiting function allows to reduce the maximum distance within which the transmitting unit must remain to start up the system and to optionally limit the radio remote control working range. This function is widely used in automobile factories where many stations in one area.

#### Procedure is as follows:-

To Change the Radio power

1. Press button 1 & button 5 and insert the battery. On this GREEN led blink 5times.
2. To set Radio Power Press button 2. On this RED led blink 5 times.
3. To set the Radio Power 28, we need to press button 3 two times & button 4 eight times.
4. To apply the setting press button 6. This will set your Radio Power on respective value.
5. To set range of 25-30 meter set power 18, for 50 meter range set power 21, range can be set as per customer needs.(max. power 31).

#### Multi-control system

use up to 256 transmitters with 1 receiver

#### Failure Analysis and Solution

Description	LED Signal	Failure Analysis	Solution
- GREEN LED Fast blinking on press of Start Button - Transmitter has started transmitting correctly.		- No power - Transmitter Start button Failure	- Replace new batteries - Check for Start operation
- Green LED & Red LED alternate blinking 3 times on battery insertion - Battery insert  sequence Battery detected correctly		- Stain on the battery springs. - Low battery. - Damaged batteries.	- Clean the stain on battery springs. - Use Charged Batteries / New Batteries
- Green LED ON with Red LED blinking 2 times - Radio Module is Disconnected		Radio Module is not connected	Insert the radio module correctly.
- Red LED Blinking continuously - Low Battery Indication		LOW Battery Indication	Use Charged Batteries/ New Batteries 
- Red LED ON when START is pressed - START button is pressed to begin communication		Communication unsuccessful	- Insert Magnetic Key - Release any push button other than START.
- RED LED ON continuously without pressing any button		Transmitter has entered in Programming mode	Remove and insert battery again to reset the transmitter
- Green & RED Led alternate blinking 3 times followed by Red LED blinking continuously		Transmitter has entered Pairing mode	For Pairing Procedure please refer Page No.1

**Note:-** 1 - Use only AA Duracell Batteries for Better Performance.

2 - For continue duty we can supply rechargeable batteries with charger.